



Preparedness Indicators
How to achieve, challenges,
solution

4.1a TR ASSESS-1: Tsunami Hazard Risk Assessment – Data Requirements, Methods, and Techniques

Dr. Charles McCreery Pacific Tsunami Warning Center

charles.mccreery@noaa.gov











What is Tsunami Hazard Assessment?





- What are the potential tsunamis that could impact your coasts
 - Source types?
 - Source locations?
 - How often?
 - How big
 - How far inland?
 - Time to impact?
- What are the populations threatened by these tsunamis?
- What is the infrastructure threatened by these tsunamis?

Tsunami Ready Indicator





	TSUNAMI READY INDICATORS				
. I ,	ASSESSMENT (ASSESS)				
1	ASSESS-1. Tsunami hazard zones are mapped and designated.				
Z	ASSESS-2. The number of people at risk in the tsunami hazard zone is estimated.				
3	ASSESS-3. Economic, infrastructural, political, and social resources are identified.				
II	PREPAREDNESS (PREP)				
4	PREP-1. Easily understood tsunami evacuation maps are approved.				
5	PREP-2. Tsunami information including signage is publicly displayed.				
6	PREP-3. Outreach and public awareness and education resources are available and				
	distributed.				
7	PREP-4. Outreach or educational activities are held at least 3 times a year.				
8	PREP-5: A community tsunami exercise is conducted at least every two years.				
Ш	RESPONSE (RESP)				
9	RESP-1. A community tsunami emergency response plan is approved.				
10	RESP-2. The capacity to manage emergency response operations during a tsunami is in				
	place.				
11	RESP-3. Redundant and reliable means to timely receive 24-hour official tsunami alerts				
	are in place.				
12	RESP-4. Redundant and reliable means to timely disseminate 24-hour official tsunami				
	alerts to the public are in place.				

1. Assess-1. Tsunami Hazard Zones are Mapped and Designated

Why is this the first step?






- Tsunami hazard maps are the basis for planning evacuation routes and location of tsunami shelters
- Mapping the hazard zone raises awareness of the tsunami hazard in the community
- Prepares the community for tsunami events
- Helps and guides the emergency response agencies on evacuation planning
- Guides mitigation measures to minimise the impact of tsunamis

Defining tsunami impact at your location unesco





- The impact of a tsunami on the coastline depends on the source location, directivity of the energy moving through the water column, coastal bathymetry and topography
- An enclosed bay facing a tsunami source might get higher inundation levels than an open beach tangential to the main directivity of the tsunami, even if both are at the same distance from the tsunami source
- An island in the middle of the ocean might have a lower inundation level than a continental open beach, both located equidistant from the tsunami source

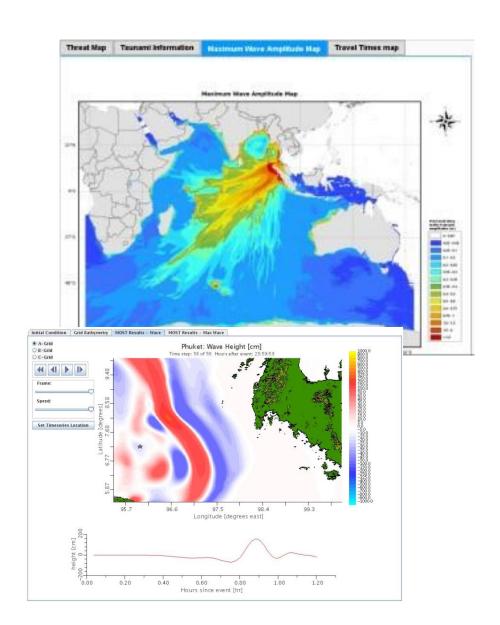


Define Tsunami hazard zone





- Tsunami hazard maps depict the areas that may be flooded by a tsunami usually based on a worst-yet-credible case scenario (the worst tsunami that can impact the area)
- The primary source for mapping potential tsunami hazard zones is inundation modelling, which illustrates areas expected to be flooded by the tsunami.
- The result of an inundation modelling study is the tsunami inundation map depicting the tsunami hazard zone

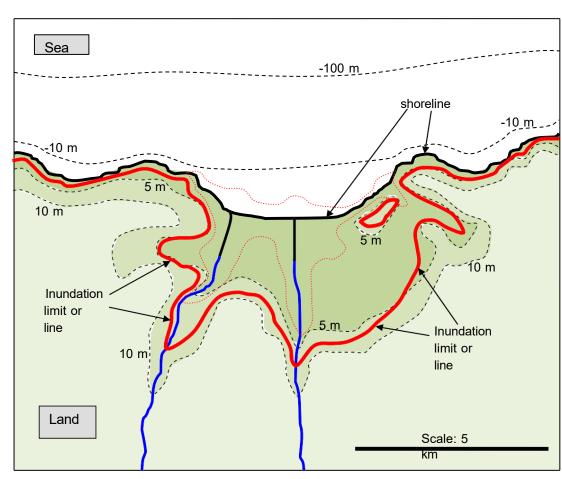

Inundation mapping (training exercise). The red line marks the maximum horizontal penetration of the tsunami. Source: UNESCO IOC and UNDP, 2009

Data requirements for inundation modelling






1. Tsunamigenic earthquake source information

- Sources: historical archives, paleotsunamis, tsunami researchers, seismologists at local universities
- If no credible earthquake source information available, worst-case scenarios need to be estimated

2. Detailed topographic and bathymetric data

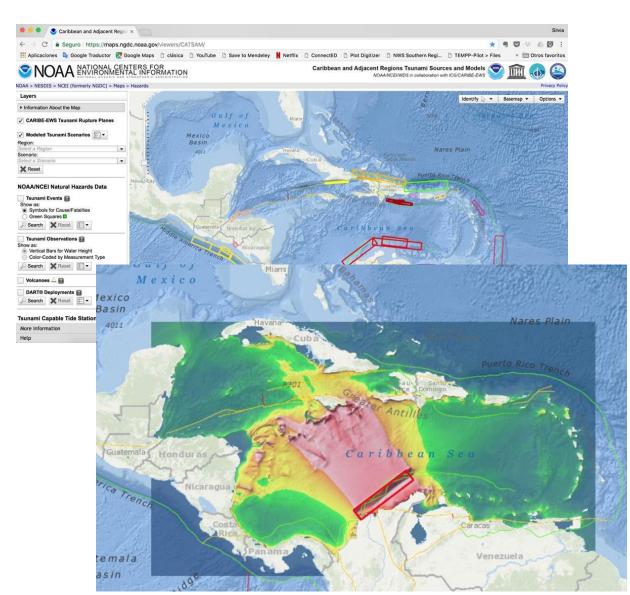


Topography and bathymetry





Inundation modelling requires detailed coastal topography and near shore bathymetry data ideally combined in a Digital Elevation Model (DEM)

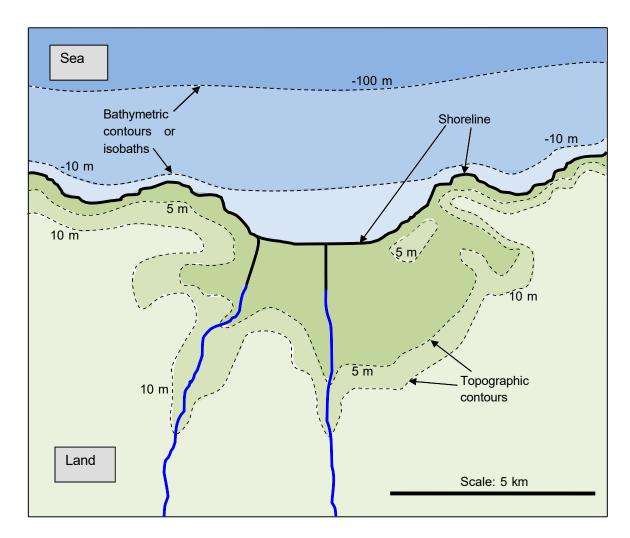

Bathymetry and topography (training exercise). Source: UNESCO IOC and UNDP, 2009


Topographic and Bathymetric Data





Topographic Survey

- Photogrammetry
- Topographic LiDAR (Light Detection and Ranging)
- Space-based Radar (SRTM)
 (Shuttle Radar Topography Mission)

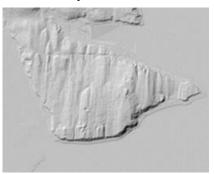





Bathymetric Survey

- Single-beam survey
- Multi-beam surveys
- Bathymetric LiDAR



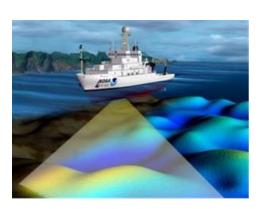

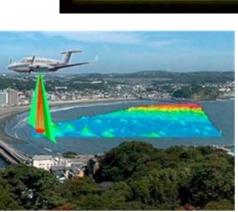

Digital Elevation Model (DEM)





A coastal DEM depicts Earth's land surface and ocean bottom. It is constructed from land and seafloor elevation data collected by federal, state and local governments, universities and private companies.



How are DEMs used?






DEMs help to plan, prepare for, and better understand ocean processes. Uses include:

 Real-time tsunami and storm-surge forecasting and warning

Hazard mitigation and community preparedness

- Ecosystem management and habitat research
- Coastal change and terrain analysis
- Pollution monitoring and contaminant dispersal
- Map creation and Earth visualization
- Long-term planning

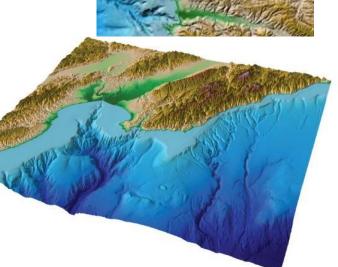

Tsunami inundation grid, Montrery Bay, California (upper) and perspective view from the southwest of Montrery (lower.) NOAA PMEL, 2012

Numerical models







Propagation models model the movement of tsunami waves from their source across the ocean to the coastal zone (linear models)


Inundation models model
how the waves interact with
the coastal bathymetry and
topography as they arrive at
the coastal zone (nonlinear models)




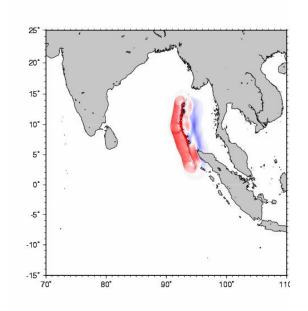

Wave Energy

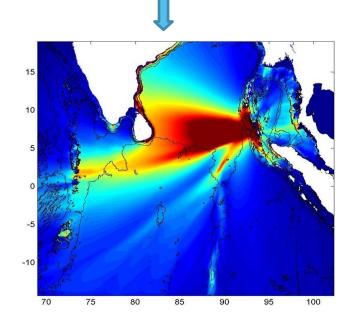

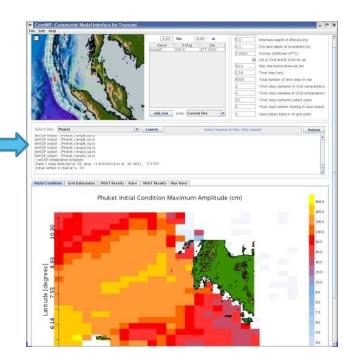

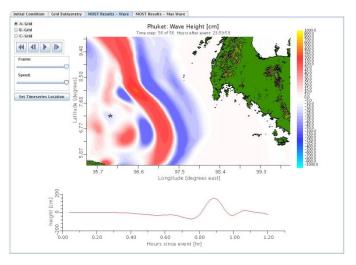

Tsunami Inundation Maps






Inundation maps should:

- Be developed using best available data for area of coverage (e.g., use highest resolution LiDAR data, best bathymetry, current deformation models, best geologic seismic data).
- Use of alternative information should be explained in documentation.

Earthquake S	Size	Slip / Deformation	Earthquake Magnitude
	Alaska M9.2 (1964)	Vertical seafloor deformation estimate.	~9.2
	Alaska Maximum	Uniform slip on 12 subfaults with each assigned values ranging from 49 to 98 feet.	~9.2

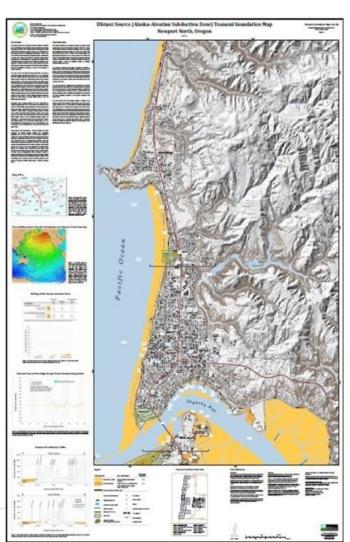


Tsunami Inundation Map Newport North, Oregon

Tsunami inundation maps should include:





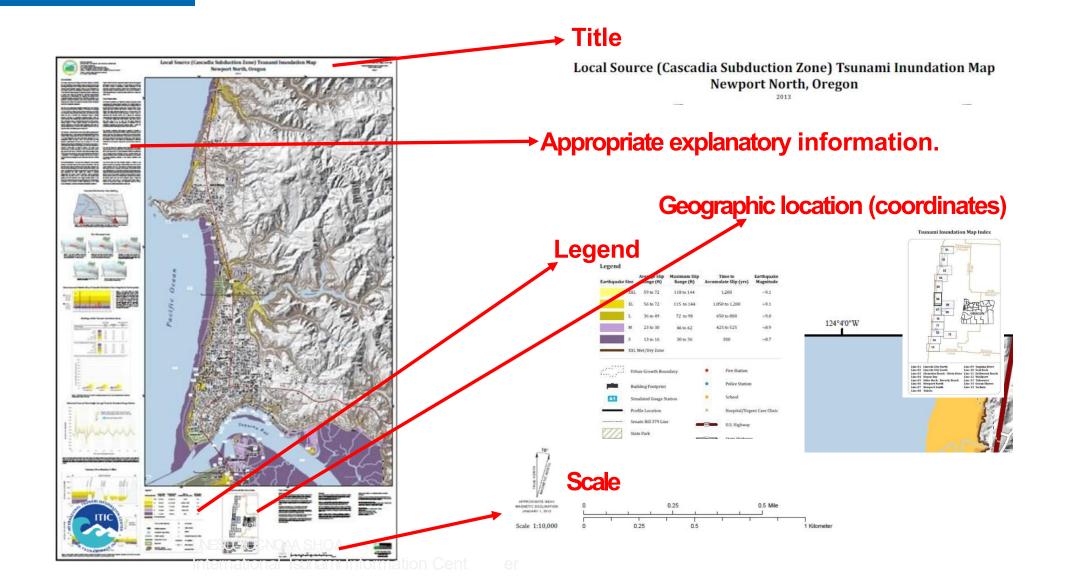


What if DEM data and inundation models are not available?





A community may not have access to high resolution digital bathymetry and/or topographic data and may not have the necessary skills to set up and run numerical inundation models.

- A "Bathtub" model approach can be used. This
 assumes that an area with an elevation less than
 a projected runup level will be flooded like a
 - "bathtub". A basic topographic map will still be required to map out inundation areas.
- Alternatively, external experts (DMOs, universities, academics, researchers and consultants) can assist in establishing the tsunami hazard zone.

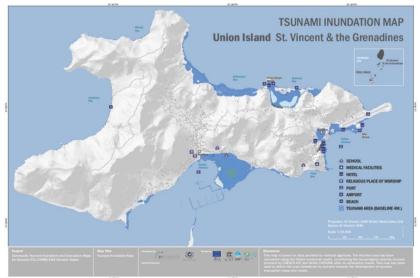

Summary of ASSESS-1





- ✓ Mapping and designation of tsunami hazard zones provides the basis for planning evacuation routes and locations for tsunami safe zones and shelters
- ✓ Tsunami hazard maps depict the areas that may be flooded by a tsunami and are usually based on a "worst-yet-credible case" scenario
- ✓ The primary source for mapping tsunami hazard zones is inundation modelling which requires specialist technical expertise available at universities, scientific institutions and/or government agencies

Summary of ASSESS-1





- ✓ The data requirements for inundation modelling are tsunamigenic earthquake source information and detailed topographic and bathymetric data, preferably in Digital Elevation Model (DEM) format.
- ✓ Numerical models are used to predict the propagation of tsunami waves from their source across the ocean to the coastal zone (linear models) and the interaction of tsunami waves with coastal bathymetry and topography in the coastal zone (non-linear models)
- ✓ If DEM data and/or inundation modelling expertise is not available, a "bathtub" model approach can be used in which it is assumed that an area of elevation less than the projected runup level will be flooded. Alternatively, experts can assist in establishing the tsunami hazard zone based on historical and geological records





Thank you Salamat po

Dr. Charles McCreery Pacific Tsunami Warning Centre

charles.mccreery@noaa.gov













